


FoxView2 Remote Configuration

JA1OGS Art & JA0POR Mano

Set up : Make sure removing any power first then connect small pcb to the FV2 unit with a ribbon cable

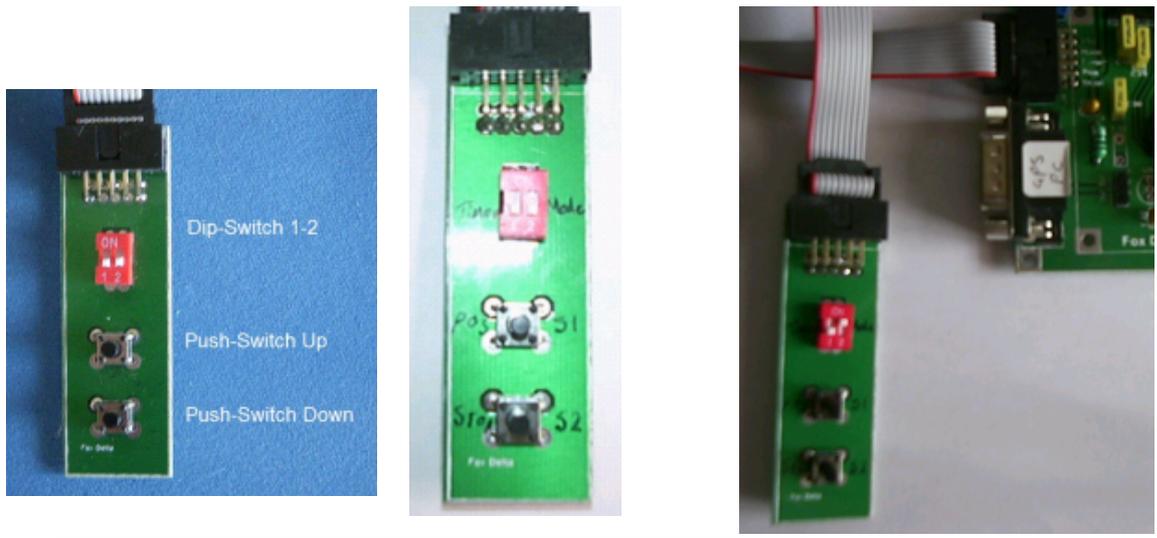

DIP Switch 1 (LH) DIP Switch 2 (RH)	Timer Mode			Function
Push Switch Up Push Switch Down	S1 S2	Pos Stop	Set /Reset Presume	Select ON/OFF or Characters Step to Next item

In this instruction we call them as shown in **bold**

There are two config menus:

1. "Set Abilitazioni" (= Set Rating") and
2. "Set Nomi & Rng" (= Set Names & Waypoint")

To get Config Menu 1




Power OFF FV2 Unit

Timer ON
Mode OFF


Keep **S1** pushed

Power ON FV2 Unit


You will get Menu 1 "Set Abilitazioni "

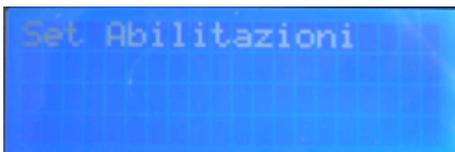

Release **S1** you are now in the first parameter "DX"

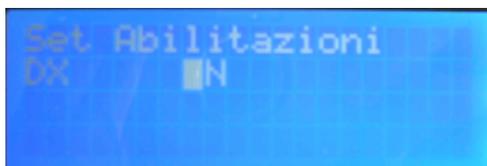

.. And so on, at end back to Main Screen

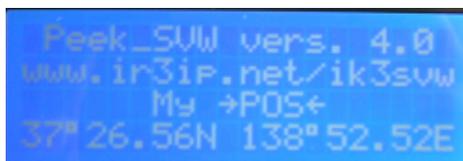

Main Screen

To get Config Menu 2

Power OFF FV2 Unit




Timer OFF
Mode ON


Keep **S1** pushed

Power ON FV2 Unit

You will get Menu 2 "Set Nomi & Rng "

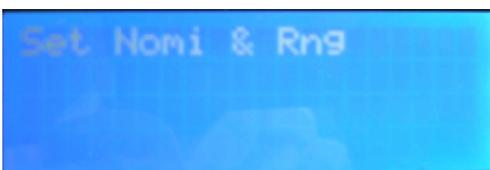


Release **S1** you are now in the first parameter "SrcCall"

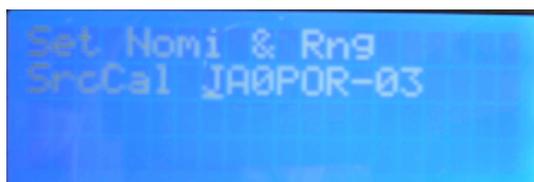

You can now edit your callsign (SSID)
from the default "NOCALL-00"
(this example shows after edited)

Push **S1** to change each character & number and after setting push **S2** to go next
When finished you will get the next parameter "Msg"

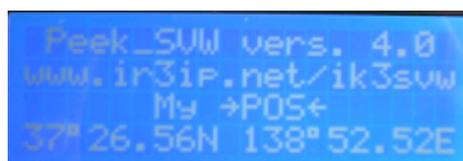

.. And so on, at end back to Main Screen

Main Screen

An Example— How to get your position (Latitude & Altitude) displayed

First set your callsign or SSID in Menu2 "SrcCall"
Then in Menu 1 set ">POS<" to ON (was OFF)

If you want to display other station's position in Menu 1 set "Displ" to ON from OFF

*** Please refer to the FoxView2 Menu.pdf downloadable at FoxDelta Web site
and set other parameters to suit your needs ***

Enjoy APRS World !